

A large, dark gray 'X' shape is centered on a black background, serving as a backdrop for the main text.

**X-ASR**

MY.GATEE.EU

LED	POSSIBLE REASON	WHAT TO DO
 1s ON START	Self-test completed without error	Enjoy airsofting
 BLINKING	<ol style="list-style-type: none"> <li>1. Motor is not connected</li> <li>2. Brushes are worn out</li> </ol>	<ol style="list-style-type: none"> <li>1. Check wiring and motor connectors</li> <li>2. Replace brushes</li> </ol>
 BLINKING ALTERNATELY	Trigger wire connected to negative motor wire	Check installation instruction or contact us at <a href="mailto:support@gatee.eu">support@gatee.eu</a>
 ON	<ol style="list-style-type: none"> <li>1. Battery is discharged</li> <li>2. Short circuit</li> <li>3. Trigger was pulled while connecting the battery</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge battery</li> <li>2. Check wiring and motor</li> <li>3. Release the trigger, check trigger contacts</li> </ol>
 BLINKING	Overload - temperature too high, X-ASR is designed for M120 spring	Use high-torque motor and gears or replace mosfet with stronger model